

RenovaDrain

Contents


blanking plate

domed grating

nuts

stainless steel clamping ring

drain body

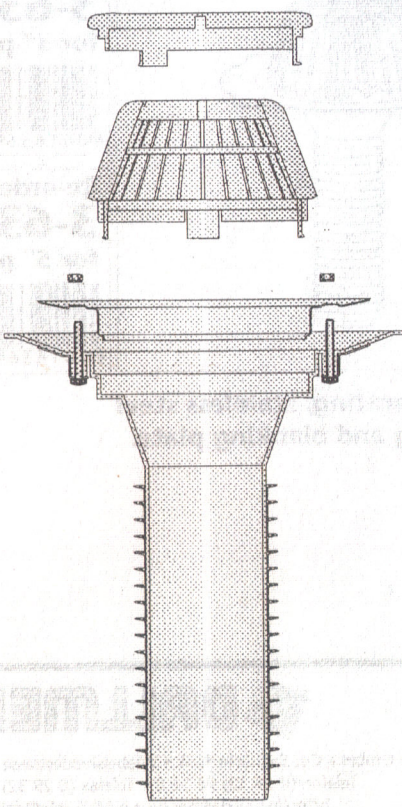


Installation instructions

Installation instructions

Installation

Push RenovaDrain into existing drain body. Clamp membrane in place with the stainless steel clamp ring. Fit and tighten nuts. Fit the blanking plate over the opening.

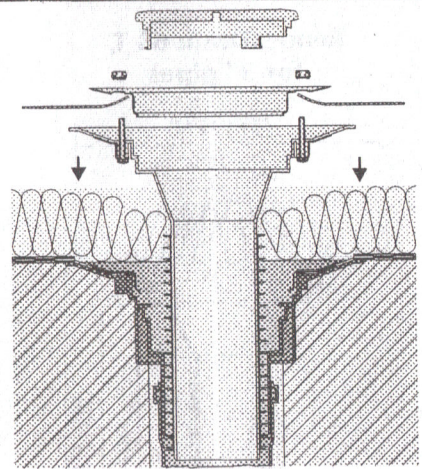

Remove blanking plate. Snap in domed grating.

